


ADDING A NEW LIGHT(S) TO AN EXISTING LINKED NETWORK

For Preston+, Persis+ & Lexington+ models

1. FIND THE ORIGINAL MASTER LIGHT.

HINT: It would have been marked by you as “M” on the sticker underneath as per your original installation instructions.

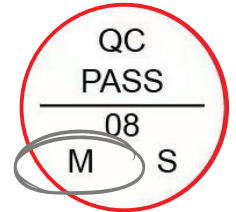

If you can't find the original Master light don't worry. Go to **ADDING A NEW LIGHT(S) TO THE EXISTING LINKED NETWORK (but you cant find the Original Master Light)**

2. Turn the switch to **OFF** on the Master light.
3. Then turn the Master light switch back to **M**. This gets it ready to accept a new light to the network.
4. Take the first additional Secondary light and switch to **S** position (far right).
5. Press the **LINK** button on both units simultaneously until the lights begin to flash. The lights will now start pairing mode. Once the light on the Secondary unit stops flashing and becomes a steady white light the pairing of the 2 lights has been successful. The Master unit will still be slowly flashing.
6. Turn the Secondary Light to the **OFF** position. The light should turn off.
7. Now turn the next Secondary light to “**S**” position. Then press the **LINK** button on this light only and hold until the light stops flashing and becomes a steady white light. Turn to **OFF** position. Repeat this step until no more Secondary Lights.

All added Secondary Lights should now be in the **OFF** position.



8. While it is still slowly flashing turn the Master switch to **OFF**.

When the linking process is completed, the Radar 360° Linkable lights create a new chain of lights which includes the old lights and the new lights.

9. Then set Light Settings per instructions in the “**SMART LIGHT SETTINGS**” document.

IMPORTANT - IDENTIFY YOUR MASTER LIGHT SO IT CAN BE EASILY LOCATED

IN THE FUTURE. It will be needed when adding new Radar 360° lights to the network in the future. Using a permanent marker, circle the letter **M** on the sticker located under the unit. You can also tie something bright or easy to see to the neck between the panel & light.

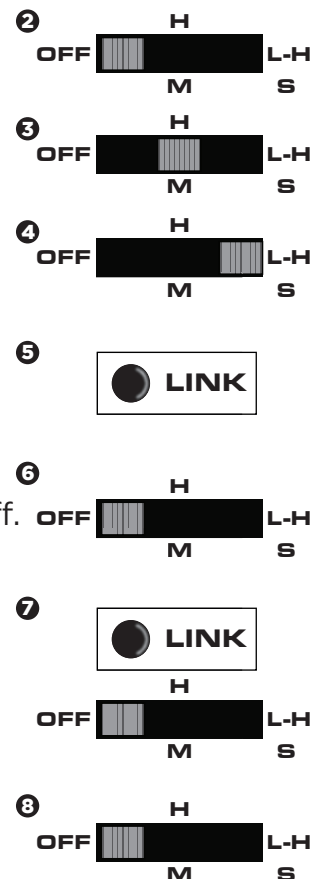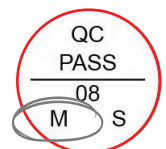

10. If the link is not working as expected, simply reset your lights to factory setting by following the “**Unlinking your Radar 360° Light**” Instructions and then start again.